

The maximum number of porter's exchange in one system is two.

One must be configured as master and the other as slave.

For intercommunication between porter's exchange INT terminals should be connected.

To select which porter's exchange to call, primary or secondary, Platea Plus must be used and internally modification should be done.

When one porter's exchange is turned off, the call is forwarded to the other.

★ Remove the resistor only in the last video distributor

